

GRP @ SBC Global . Net.

Read the Instruction Manual!!!

Quick start for Wireless CVR system.

(We put the batteries in and tuned the system for you already.)

1. Put the stands, bases and transmitters together. The transmitter brace fits in between the stand and the base and is held in place by the two wing nuts. The stand angles away from the shooter and the yellow switch on the green transmitter faces the shooter.
2. Attach the microphones and plug in the cables.
3. Mount the relay box (small gray box with AC plug) to the wall of the trap house, using the bracket provided, so the AC cord reaches the 115Volt outlet and the relay cable can be plugged in to the trap machine. Plug the green receiver in to the 3 pin plug on the relay box. You should see the red LED come on to indicate power to the receiver.
4. Mount the Lexan (shot proof) plastic holder to the upper left hand corner of the outside of the trap house. Make sure you put the small plastic piece inside the holder before you screw it to the wall. The receiver connected to the relay box in the trap house drops in and is removed when you finish shooting for the day. After you make sure the trap receiver is working, make sure it is **unplugged** from the 115v source.
5. Turn on all the microphones using the **yellow** buttons, turn on

the hand held scorers unit. **NOW** plug in the receiver, the 5 mics will encode themselves. **This last step is important!** You should be able to push the red button on the hand unit and hear the relay fire in the gray relay box in the house. If the unit is plugged into the trap it will fire targets now. The yellow button on the scorers unit will disable the mics while people change stations.

LED's will sometimes flash "error" if there is a momentary lapse of communication, it's OK.

The CVR Wireless will cycle every 1.6 seconds. Most traps re-cock and reload in 1.8 seconds or slower. **IF YOU ARE CALLING FOR A TARGET WHEN THE UNIT COMES BACK ON AND THE TRAP IS NOT RELOADED YET YOU MAY EXPERIENCE A DELAYED RELEASE. PLEASE GIVE THE MACHINE TIME TO CYCLE!**

The scorers unit shuts down after 2 minutes of non use. The microphone units shut down after 10 minutes of non use. This is a battery saving feature. Just turn them back on if they are off.

